INSTALLATION INSTRUCTIONS
CANAM MAVERICK TRAIL
REAR VENT WINDSHIELD
PART # 77-2600-R

IMPORTANT NOTICES

READ AND UNDERSTAND THESE INSTRUCTIONS COMPLETELY BEFORE INSTALLATION TO AVOID INJURY TO YOURSELF, DAMAGE TO THE VEHICLE OR ACCESSORY.

- **For proper installation, TWO people are required.**
- **Torque specifications must be followed when tightening bolts. Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.**
- **As specified on carton label, once protective film on shields is removed, product cannot be returned.**
- **As specified on carton label, damage caused by packaging staples is not covered by warranty. All staples must be removed prior to removing product from carton.**
- **Failure to follow these installation instructions completely may void any warrantable components and result in product damage or personal injury.**
- **Do not use Loctite or any other similar fastener adhesive. These types of products react to plastics and cause cracking. Not covered by any warranty.**
- **Our windshields are made from the highest quality material providing optimum transparency and clarity. Blurriness and/or extrusion marks may or may not appear when looking through windshield from a wide, side-angle. This is normal for all extruded clear plastic materials.**
- **The application of improper cleaners, abrasive and/or dirty cleaning towels can severely damage the product. Failure to follow cleaning recommendation (provided herewith) may void any warrantable components.**

DEALER

These instructions contain important information for future reference and must be given to the customer at time of purchase or upon completion of installation.

Parts List (parts available with kit only and not available separately)

ITEM		PART NAME	DESCRIPTION	QTY
A		Windshield	CNC windshield cut-out made of ⅛" thick GE polycarbonate or equivalent	1
B		Vent grill	CNC vent grill cut-out made of 3/16" tinted polycarbonate	1
C		Co-extruded bulb seal	Includes: 84" Co-extruded bulb seal **[end user to cut to exact length]**	1
INSTRUCTION BAG	D	Windshield Hardware	Includes: 4 metal plate hooks, 4 phillips truss head screws M6 x 20, 4 plastic shoulder washers M6 and 3 push type plastic retainers	1
	E	Vent hardware	Includes: 2 carriage bolts M6 x 30, 2 thin plastic washers, 4 plastic washers M6, 2 rubber washers M6 and 2 female thread knobs M6	1

1. Installation

a) Find a clean flat area where you can safely lay down the windshield (Item A). Partially remove the protective film on both sides and apply the co-extruded bulb seal (Item C) using manual pressure to ensure good adhesion and cut any excess.

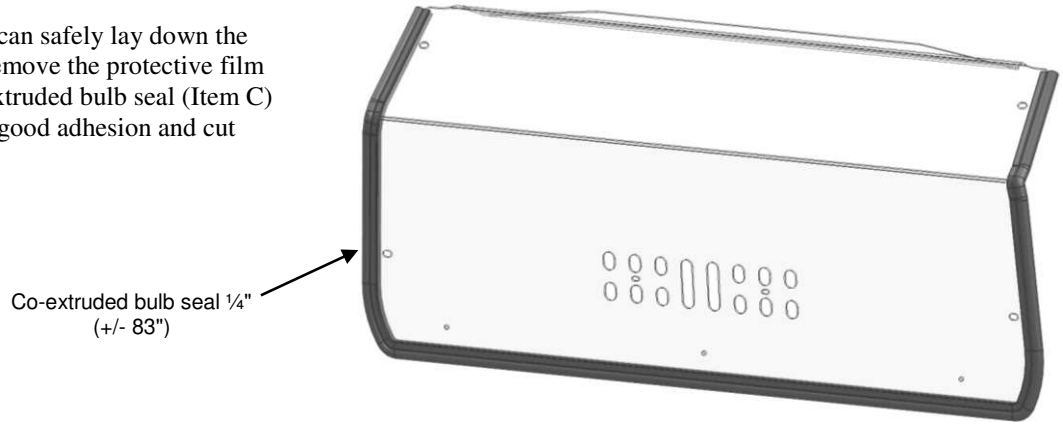

IMPORTANT NOTICES

Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.

b) As per drawing, install the vent grill (Item B) on the interior side of the windshield using supplied hardware (Item E).

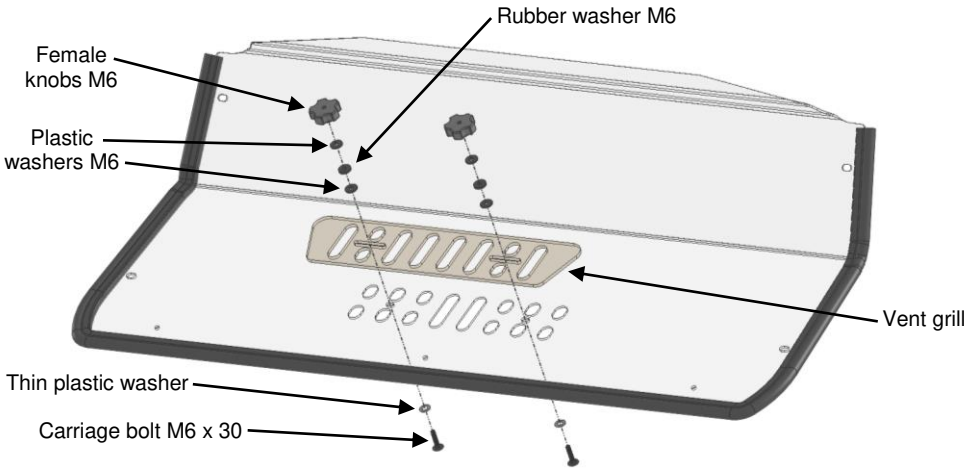

a) Install the windshield to the vehicle as shown below.

IMPORTANT NOTICES

TWO people are required to install the windshield to the roll cage. Since windshield is wider at the bottom, gentle manipulation and/or slight bending by each person will be required for windshield to slide all the way down into position.

Warning: Exercise extreme care during the next step in order to ensure that you do not damage the windshield or vehicle. This is a tight fit.

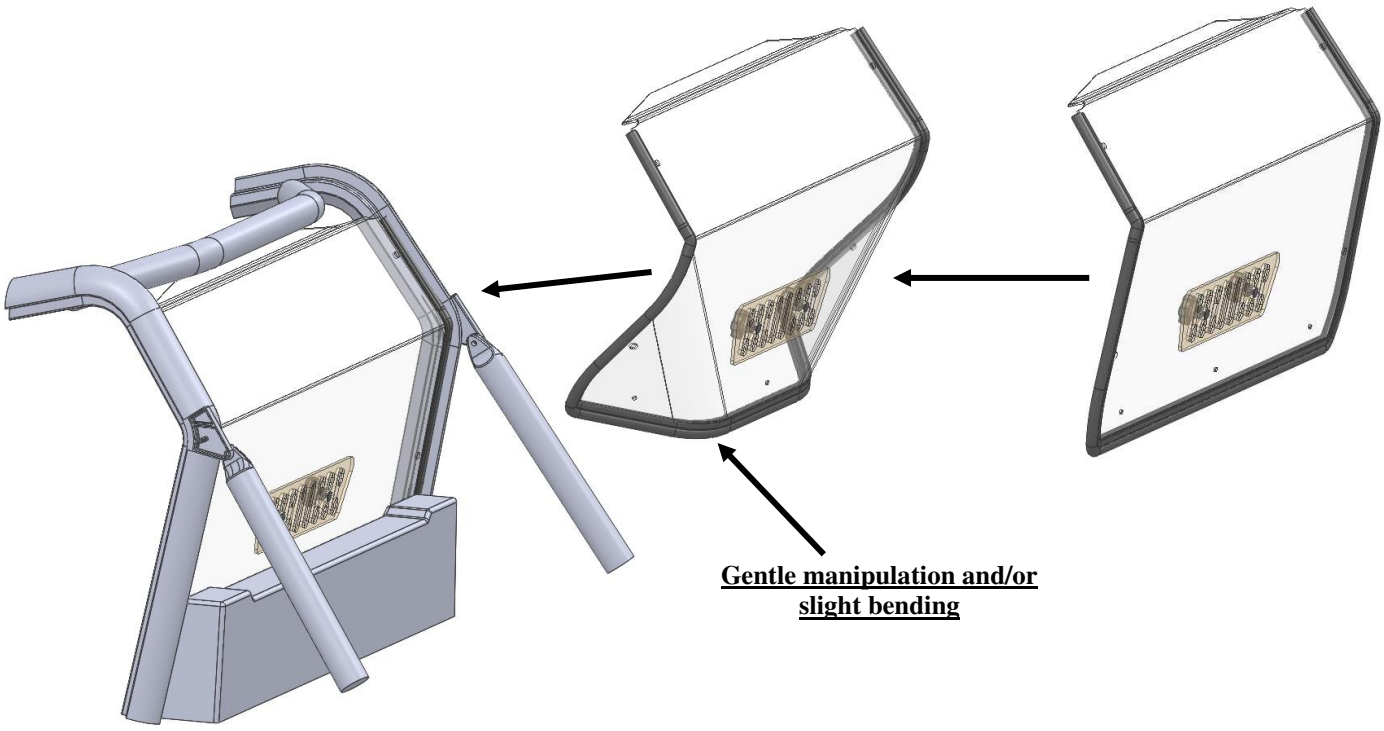

IMPORTANT NOTICES

Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.

b) Install the supplied hardware (Item D) as shown below. Adjust the position of the windshield and tighten.
Caution: over tightening any hardware could cause irreversible damage to the windshield.

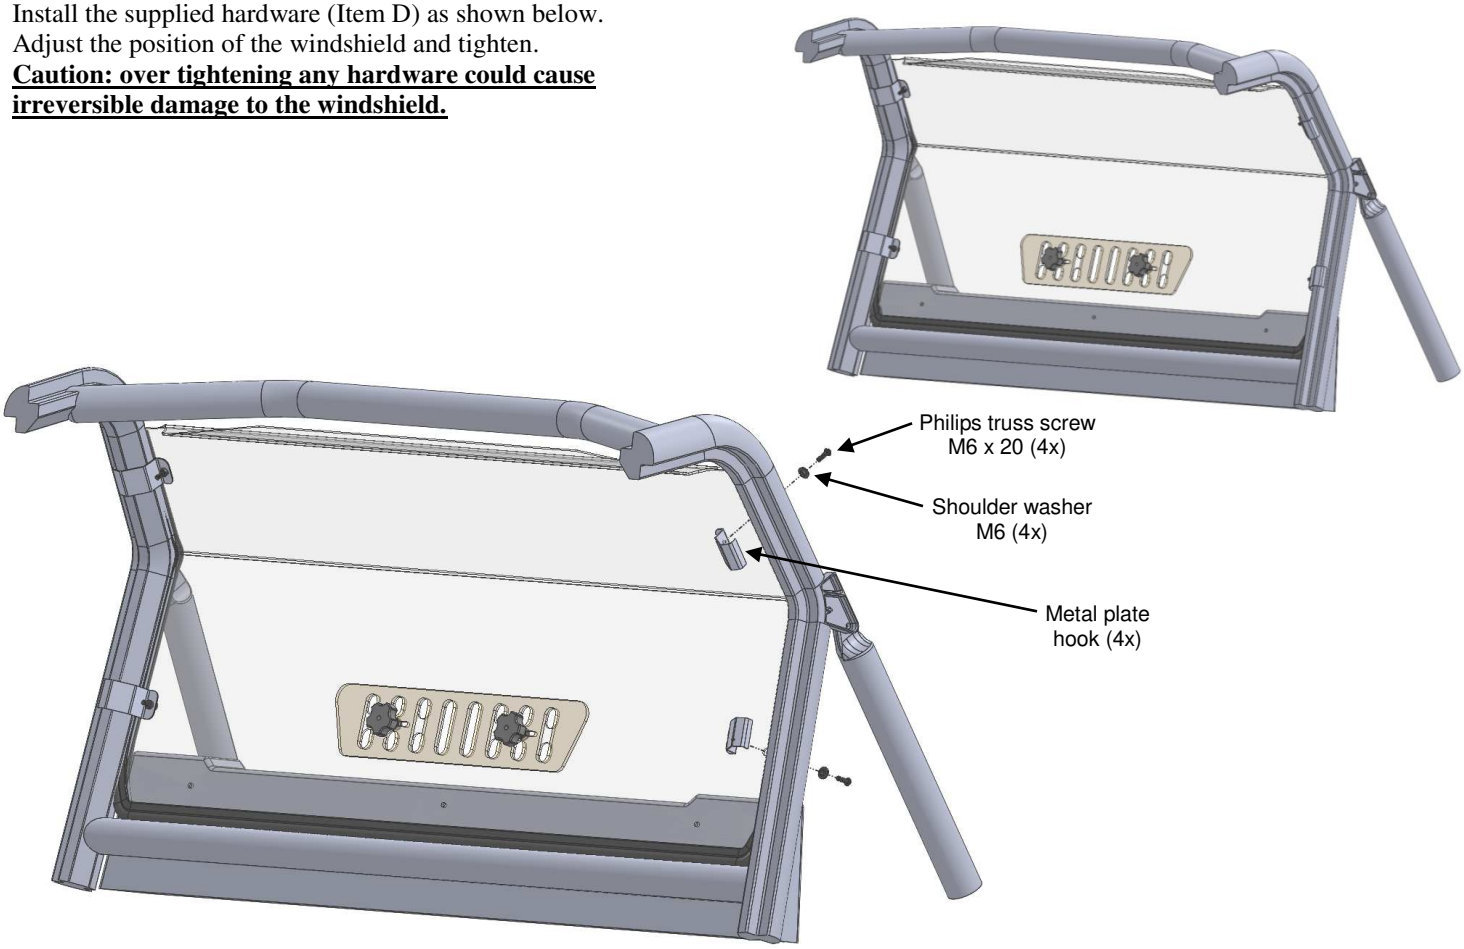

c) Ensure that the windshield is properly positioned and drill ¼" diameter mounting hole (3) through the OEM back panel using the windshield pre-drilled mounting holes as template guides. **For each hole, a single (1) layer of OEM back panel should be drilled / pierced.** Secure in place using supplied push type plastic retainers as shown below.

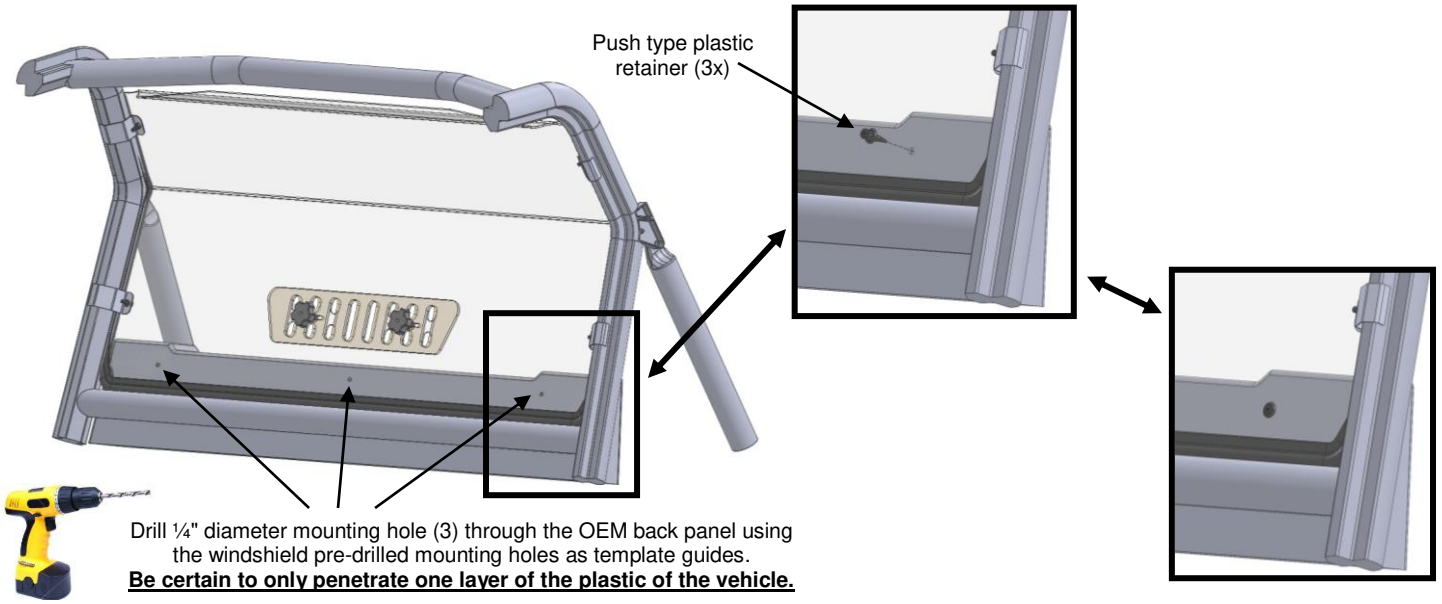

IMPORTANT NOTICES

Trailerable ONLY with a FULL Front windshield AND Roof - or damage can occur!

2. Maintenance and Care

Tighten all hardware after first use and periodically thereafter.

CLEANING:

- **Rinse with lukewarm water; wash gently with mild soap or detergent and lukewarm water, using a soft cloth or sponge. DO NOT SCRUB or use brushes or squeegees.**
- **Rinse again. Dry with soft cloth or moist cellulose sponge to prevent water spotting.**
- **To remove wet paint, glazing compound or grease, rub lightly with a good grade of VM&P naphtha or isopropyl alcohol, then wash and rinse. DO NOT USE GASOLINE.**

NOTICE: Abusive cleaning procedures by hand washing or automated washing equipment will eventually result in visual hazing, loss of light transmission and coating delamination.

Compatible Cleaning Agents

- **Aqueous Solution of Soaps and Detergents**

Joy	Freon T.F.	Palmolive liquid	Top Job	VM&P grade Naphtha	Windex (with ammonia D)

MINIMIZING HAIRLINE SCRATCHES

For minimizing scratches and minor abrasions, mild automobile polish can be used.
Recommended products: Johnson Paste Wax, Novus Plastic Polish #1 and #2, Mirror Glaze plastic polish and Plexux1.
Testing polish on a separate Lexan sample is recommended. Be sure to follow product instructions carefully.